

REMINGTON®

Vacuum Beard and Stubble Trimmer





MB6850

 www.remington.co.uk

Register online for £10,000 prize draw
EXTRA year guarantee FREE rewards gallery

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.



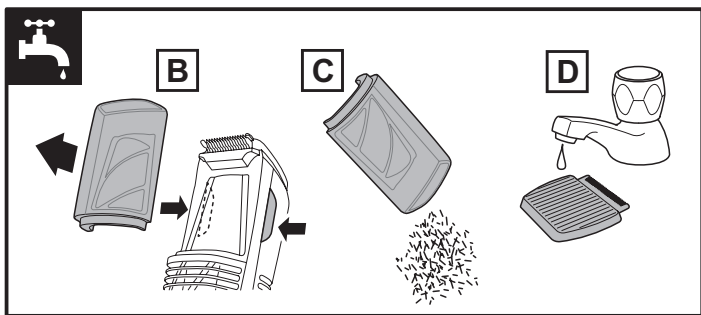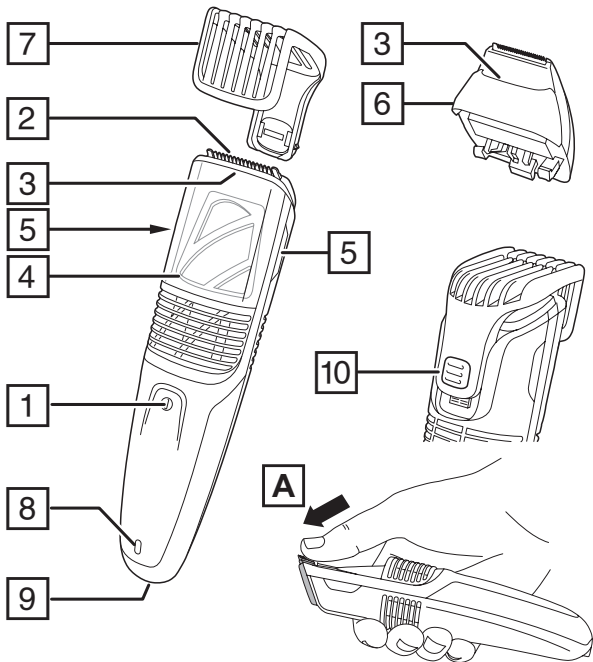

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- ⊘ Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- This product should only be used with the charging adaptor supplied.
- **WARNING:** Keep the appliance dry.
- Do not use the appliance, charging adaptor, or any other part if it is damaged, as this may cause injury. Always replace a damaged charging adaptor with one of the original type.
- The charging adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
- Do not immerse the charging adaptor in water or any other liquid, nor rinse it under the tap.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|-----------------------------------|----------------------------------|
| 1. On/off switch | 8. Charge indicator light |
| 2. Main blade | 9. Charger connector |
| 3. Vacuum intake | 10. Comb lock button |
| 4. Vacuum chamber | 11. Charging adapter (not shown) |
| 5. Vacuum chamber release buttons | 12. Storage case (not shown) |
| 6. Detail blade | 13. Cleaning brush (not shown) |
| 7. Adjustable beard comb 2 – 18mm | |
-

CHARGING

Charge your trimmer:

- Before using for the first time.
 - When the charge indicator light is flashing.
 - After your trimmer has not been used for a long time.
1. Ensure the trimmer is switched off.
 2. Connect the charging adapter to the power connector and then to the mains power outlet.
 3. When charging, the charge indicator light will light up. The light will go out when charging is complete.
 4. A first time charge should take approximately 2-4 hours. Top up charges should take approximately 2 hours.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 16-20 hours.

Corded/cordless use

- When fully charged, your trimmer should provide approximately 60 minutes of cordless use.
 - You can also connect the charger (as if you were going to charge the trimmer) and operate the trimmer 'corded' if desired.
-

ATTACHMENTS

Exchanging the main and detail blades

Your trimmer is supplied with the main blade already fitted. It is easier to remove and refit the main blade with the vacuum chamber removed.

1. Switch your trimmer off.
2. Hold the trimmer in one hand.
3. Push the top of the blade away from the trimmer body using your thumb (Fig A)

4. Use enough force to free the blade from the trimmer body. Once free, lift it off.
5. Fit the desired blade by engaging the tab on the back of the blade into the rear of your trimmer. Press the front of the blade down until it clicks.
6. Replace the vacuum chamber.

Fitting/removing the adjustable beard comb

1. Switch your trimmer off.
2. Depress the comb lock button then slide the adjustable comb into the guides on the rear of your trimmer. Slide the comb all the way down then release the button.
3. To adjust the length of the beard comb, depress the comb lock button then slide the comb to the desired length.

INSTRUCTIONS FOR USE

Trimming your beard

For even cutting, allow your trimmer to cut its way through the beard hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb length attachment.

Regularly check the level of collected hair in the vacuum chamber. When full, switch off your trimmer and remove the vacuum chamber. Empty the hair clippings. Refit the vacuum chamber before continuing use.

Thinning or tapering the beard or moustache

1. Set the adjustable comb to the desired length.
2. Place the flat part of the comb against the skin. Slowly slide the comb through the hair.
3. Repeat from different directions as necessary.
4. If hair builds up in the trimmer comb during the trimming process, switch the unit off, remove the comb and brush off the hair.

Defining the line of the beard or moustache

1. Remove the main blade and replace it with the detail blade.
2. Start trimming at the edges of your beard/moustache line.
3. Move your trimmer carefully towards the line until the desired shape is achieved.

Trimming your sideburns

1. Fit the wide trimming head, or the detail trimming head as required.
2. Hold your trimmer with blade facing you.
3. Start with edge of your sideburns. With the trimmer blade resting lightly against your skin, move your trimmer carefully towards your sideburn until the desired shape is achieved.

Trimming the nape of your neck

1. Remove the adjustable comb.
2. Use the fingers of one hand to lift the hair at the base of your head up off your neck.
3. Your index finger should be covering the roots of the hairs you are lifting to prevent them from being accidentally cut.
4. Hold the trimmer to the base of your neck with the blade facing up. Move the trimmer up the neck until it touches your index finger which is protecting the hair roots.
5. Move your trimmer slowly and keep the hair roots at the base of your head out of the way of the trimmer.

TIPS FOR BEST RESULTS

- Your beard, moustache or sideburn hair should be dry.
- Avoid applying lotions before use.
- If you are trimming for the first time, start with the adjustable comb set to its maximum length position.

CARING FOR YOUR TRIMMER

Your beard trimmer is fitted with high quality blades. To ensure long lasting performance, clean the blades and trimmer regularly.

After each use

1. Ensure your trimmer is switched off and disconnected from the charger before cleaning.
2. Remove the blade. Brush the accumulated hair from the blade.
3. Wipe your trimmer body with a damp cloth and dry immediately. Do not submerge your trimmer in water.
4. Refit the blade.
5. Press the two vacuum chamber release buttons and remove the vacuum chamber (Fig B).
6. Empty the vacuum chamber (Fig C) and rinse it under a running tap. Dry then refit the chamber.

Washable heads

The trimming heads are washable for ease of cleaning. Always remove the trimming head from your trimmer before washing.

1. Rinse the trimming heads under a running tap to remove any hair clippings (Fig D).
2. Once dry, refit the trimming head.

REMOVING THE RECHARGEABLE BATTERY

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
 - Disconnect the charging adapter before removing the battery.
1. Ensure that the battery is fully discharged. To do this, operate the trimmer until it stops.
 2. Remove the vacuum chamber then remove the four exposed screws.
 3. Unscrew the four screws located on the outside edges of the internal frame.
 4. Lift the internal frame out of the bottom housing. Remove the three screws holding the printed circuit board to the internal frame.
 5. Take out the battery and printed circuit board assembly from the battery chamber.
 6. Cut the tabs on both ends of the battery and remove it from the printed circuit board
- The battery must be disposed of at an appropriate official recycling/collection point.
 - Do not attempt to operate the trimmer once you have opened it.

ENVIRONMENTAL PROTECTION



To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.


If you call the Service Centre, please have the model number to hand, as we won't be able to help you without it. The model number can be found on the rating plate of the appliance.


Replacement parts and accessories are available to buy at

www.remington-europe.com

SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.ie.remington-europe.com

 **REGISTER ONLINE FOR**

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. MB6850

17/UK/ MB6850 T22-0005326 Version 09 /17

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2017 Spectrum Brands, Inc.